

Industrial communication solutions for Windows

XADAM Driver Manual

Advantech Adam Series 4000 Data Acquisition Modules Driver

Contents

XADAM technical specifications.....	3
General information.....	3
Command list	3
Analog Input Modules Command Set	3
Set Configuration (4011/4011D/4012/4013/4015/4016/4017/4018/4018M/4019)	3
Configuration Status (4011/4011D/4012/4013/4015/4016/4017/4018/4018M/4019).....	4
Analog Data In (4011/4011D/4012/4013/4015/4016/4017/4018/4018M/4019)	5
Read Analog Input from Channel N (4015/4017/4018/4018M/4019)	6
Enable/Disable Channels for Multiplexing (4015/4017/4018/4018M/4019)	6
Read Enabled/Disabled Channel Status (4015/4017/4018/4018M/4019)	6
Span Calibration (4011/4011D/4012/4013/4016/4017/4018/4018M)	7
Offset Calibration (4011/4011D/4012/4013/4016/4017/4018/4018M)	7
Synchronized Sampling (4011/4011D/4012/4013/4015/4016/4019)	8
Read Synchronized Data (4011/4011D/4012/4013/4015/4016/4019).....	8
Read CJC Status (4011/4011D/4018/4018M/4019)	8
CJC Offset Calibration (4011/4011D/4018/4018M/4019).....	9
Read Digital I/O and Alarm Status (4011/4011D/4012/4014D/4016)	9
Set Digital Output Values (4011/4011D/4012/4014D/4016).....	9
Enable Alarm (4011/4011D/4012/4014D/4016).....	10
Set High Alarm Value (4011/4011D/4012/4014D/4016)	10
Set Low Alarm Value (4011/4011D/4012/4014D/4016)	10
Disable Alarm (4011/4011D/4012/4014D/4016)	11
Clear Latched Alarm (4011/4011D/4012/4014D/4016).....	11
Read High Alarm Value (4011/4011D/4012/4014D/4016)	11
Read Low Alarm Value (4011/4011D/4012/4014D/4016).....	11
Read Event Counter (4011/4011D/4012/4014D).....	12
Clear Event Counter (4011/4011D/4012/4014D).....	12
Analog Output Modules Command Set.....	12
Set Configuration (4021).....	12
Analog Data Out (4021)	13
Start-up Output Current/Voltage Configuration (4021).....	14
Trim Calibration (4021)	14
4 mA Calibration (4021)	14
20 mA Calibration (4021)	14
Configuration Status (4021)	15
Last Value Readback (4021).....	16

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/cpksoftengineering

cpksoftengineering@hotmail.com

cpksoftengineering@hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Current Readback (4021).....	16
Read Reset Status (4021).....	16
Digital I/O and Relay Output Modules Command Set	17
Set Configuration (4050,4051,4052,4053,4055,4060,4068)	17
Read Digital Data In as Bytes (4050,4051,4052,4053,4055,4060,4068)	17
Read Digital Data In as Bits (4050,4051,4052,4053,4055,4060,4068)	17
Digital Data Out (4050,4055,4060,4068)	18
Synchronized Sampling (4050,4051,4052,4053,4055,4060,4068)	18
Read Synchronized Data (4050,4051,4052,4053,4055,4060,4068)	19
Configuration Status (4050,4051,4052,4053,4055,4060,4068)	19
Read Reset Status.....	19
Counter/Frequency Modules Command Set.....	20
Read Counter or Frequency Value (4080/4080D)	20
Set Maximum Counter Value (4080/4080D).....	20
Read Maximum Counter Value (4080/4080D).....	20
Start/Stop Counter (4080/4080D).....	21
Clear Counter (4080/4080D).....	21
Error messages	21
Supported devices.....	22

CPKSoft Engineering

Industrial communication
drivers.

www.cpksoft.com

[www.facebook.com/
cpksoftengineering](http://www.facebook.com/cpksoftengineering)

[cpksoftengineering@
hotmail.com](mailto:cpksoftengineering@hotmail.com)

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

XADAM technical specifications

General information

The XADAM driver allows you to connect with ADVANTECH ADAM 4000 Series Data Acquisition Modules.

An RS-232/485 converter such as ADAM-4520 or a RS-485 PC-bus board such as PCL-743/745 must be used in the PC side.

If you cannot communicate or if you are using RS-485 to connect to the device, you should set the RTS signal during the communication. This can be done by setting the RTSEnable argument when calling the read and write methods. If you still cannot communicate, check that your RS-485 cables are not inverted.

<Optional Modules> ADVANTECH ADAM-4510 Repeater Module
ADVANTECH ADAM-4520 Isolated RS-232/RS-485 Converter Module

Command list

Analog Input Modules Command Set

Set Configuration (4011/4011D/4012/4013/4015/4016/4017/4018/4018M/4019)

Description of this command:

Sets the address, input range, baud rate, data format, checksum status and/or integration time for a specified analog input module.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

6

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

20

Values that are sent:

Value in PointValue (0) = Defines the baud rate to be used (3-8).

- 3 = 1200 Bauds
- 4 = 2400 Bauds
- 5 = 4800 Bauds
- 6 = 9600 Bauds
- 7 = 19200 Bauds
- 8 = 38400 Bauds

Value in PointValue (1) = Defines the new address (0-255).

Value in PointValue (2) = Defines the integration time type, where:

- 0 = 50 ms Integration Time.
- 1 = 60 ms Integration Time.

Value in PointValue (3) = Defines if messages must include checksum

- 0 = No checksum in messages
- 1 = Use checksum in messages

Value in PointValue (4) = Defines the data format to be used.

- 0 = Engineering Units
- 1 = % of FSR
- 2 = 2's complement
- 3 = Ohms.

Value in PointValue (5) = Defines the type input range code.

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

- 0 = +/- 15 mV
- 1 = +/- 50 mV
- 2 = +/- 100 mV
- 3 = +/- 500 mV
- 4 = +/- 1 V
- 5 = +/- 2.5 V
- 6 = +/- 20 mA
- 8 = +/- 10 V
- 9 = +/- 5 V
- 10 = +/- 1 V
- 11 = +/- 500 mV
- 12 = +/- 150 mV
- 13 = +/- 20 mA
- 14 = Type J Thermocouple 0 to 760 C degrees
- 15 = Type K Thermocouple 0 to 1370 C degrees
- 16 = Type T Thermocouple -100 to 400 C degrees
- 17 = Type E Thermocouple 0 to 1370 C degrees
- 18 = Type R Thermocouple 500 to 1750 C degrees
- 19 = Type S Thermocouple 500 to 1750 C degrees
- 20 = Type B Thermocouple 500 to 1800 C degrees
- 32 = Platinum -100 to 100 C degrees, alfa=0.00385
- 33 = Platinum 0 to 100 C degrees, alfa=0.00385
- 34 = Platinum 0 to 200 C degrees, alfa=0.00385
- 35 = Platinum 0 to 600 C degrees, alfa=0.00385
- 36 = Platinum -100 to 100 C degrees, alfa=0.003916
- 37 = Platinum 0 to 100 C degrees, alfa=0.003916
- 38 = Platinum 0 to 200 C degrees, alfa=0.003916
- 39 = Platinum 0 to 600 C degrees, alfa=0.003916
- 40 = Nickel -80 to 100 C degrees
- 41 = Nickel 0 to 100 C degrees
- 42 = Cooper (10 ohms @ 25 C degrees) 0 to 120 C degrees.
- 43 = Cooper (10 ohms @ 0 C degrees) 0 to 120 C degrees.

Important note:

An analog input module requires a maximum of seven seconds to perform auto calibration and ranging after it is reconfigured. During this time span, the module cannot be addressed to perform any other actions.

Configuration Status (4011/4011D/4012/4013/4015/4016/4017/4018/4018M/4019)

Description of this command:

Returns the configuration parameters for the specified analog input module (address, input range, baud rate, data format, checksum status and integration time).

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1-5

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

1

Values that are returned:

Value in PointValue (0) = Indicates the input range type, where:

- 0 = +/- 15 mV
- 1 = +/- 50 mV
- 2 = +/- 100 mV
- 3 = +/- 500 mV
- 4 = +/- 1 V
- 5 = +/- 2.5 V
- 6 = +/- 20 mA

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

- 8 = +/- 10 V
- 9 = +/- 5 V
- 10 = +/- 1 V
- 11 = +/- 500 mV
- 12 = +/- 150 mV
- 13 = +/- 20 mA
- 14 = Type J Thermocouple 0 to 760 C degrees
- 15 = Type K Thermocouple 0 to 1370 C degrees
- 16 = Type T Thermocouple -100 to 400 C degrees
- 17 = Type E Thermocouple 0 to 1370 C degrees
- 18 = Type R Thermocouple 500 to 1750 C degrees
- 19 = Type S Thermocouple 500 to 1750 C degrees
- 20 = Type B Thermocouple 500 to 1800 C degrees
- 32 = Platinum -100 to 100 C degrees, alfa=0.00385
- 33 = Platinum 0 to 100 C degrees, alfa=0.00385
- 34 = Platinum 0 to 200 C degrees, alfa=0.00385
- 35 = Platinum 0 to 600 C degrees, alfa=0.00385
- 36 = Platinum -100 to 100 C degrees, alfa=0.003916
- 37 = Platinum 0 to 100 C degrees, alfa=0.003916
- 38 = Platinum 0 to 200 C degrees, alfa=0.003916
- 39 = Platinum 0 to 600 C degrees, alfa=0.003916
- 40 = Nickel -80 to 100 C degrees
- 41 = Nickel 0 to 100 C degrees
- 42 = Cooper (10 ohms @ 25 C degrees) 0 to 120 C degrees.
- 43 = Cooper (10 ohms @ 0 C degrees) 0 to 120 C degrees.

Value in PointValue (1) = Indicates the baud rate code, where:

- 3 = 1200 Bauds
- 4 = 2400 Bauds
- 5 = 4800 Bauds
- 6 = 9600 Bauds
- 7 = 19200 Bauds
- 8 = 38400 Bauds

Value in PointValue (2) = Indicates the configured data format, where:

- 0 = Engineering Units.
- 1 = % of FSR.
- 2 = 2's complement.
- 3 = Ohms.

Value in PointValue (3) = Indicates if the module uses checksum in messages

- 0 = No checksum in messages
- 1 = Use checksum in messages

Value in PointValue (4) = Indicates the integration time type, where:

- 0 = Integration Time 50 ms
- 1 = Integration Time 60 ms

Analog Data In (4011/4011D/4012/4013/4015/4016/4017/4018/4018M/4019)

Description of this command:

Returns the input value from a specified analog input module in the currently configured data format.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

0

Meaning of the DriverP3 parameter:

Indicates the data format to be used.

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

- 0 = Engineering Units
- 1 = % of FSR
- 2 = 2's complement
- 3 = Ohms.

Values that are returned:

Value in PointValue (0) = Input value

Read Analog Input from Channel N (4015/4017/4018/4018M/4019)

Description of this command:

Returns the input value from channel number N of the specified analog input module in the currently configured data format.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

17

Meaning of the DriverP3 parameter:

Indicates the data format to be used.

- 0 = Engineering Units
- 1 = % of FSR
- 2 = 2's complement
- 3 = Ohms.

Meaning of the DriverP4 parameter:

Identifies the channel you want to read (0-7).

Values that are returned:

Value in PointValue (0) = Input value from channel N

Enable/Disable Channels for Multiplexing (4015/4017/4018/4018M/4019)

Description of this command:

Enables/disables multiplexing simultaneously for separate channels of the specified input module.

Methods used to run this command:

Digital Output

Number of points accepted by this command:

8

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

39

Values that are sent:

Value in PointValue (0) = 0/1 to enable/disable first channel . .

Value in PointValue (n-1) = 0/1 to enable/disable last channel

Important note:

- 0 = Disabled
- 1 = Enabled

Read Enabled/Disabled Channel Status (4015/4017/4018/4018M/4019)

Description of this command:

Asks the specified input module to return the status of its channels (enabled or disabled).

Methods used to run this command:

Digital Input

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Number of points accepted by this command:

1-8

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

18

Meaning of the DriverP3 parameter:

Indicates the first channel to be read (0-7).

Values that are returned:

Value in PointValue (0) = Status of first channel read . .

Value in PointValue (n-1) = Status of last channel read

Span Calibration (4011/4011D/4012/4013/4016/4017/4018/4018M)

Description of this command:

Calibrates the analog input module to correct for gain errors.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

21

Values that are sent:

Value in PointValue (0) = New gain value

Important note:

An analog input module requires a maximum of seven seconds to perform auto calibration and ranging after it is reconfigured. During this time span, the module cannot be addressed to perform any other actions.

Offset Calibration (4011/4011D/4012/4013/4016/4017/4018/4018M)

Description of this command:

Calibrates the analog input module to correct for offset errors.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

22

Values that are sent:

Value in PointValue (0) = New offset value

Important note:

An analog input module requires a maximum of seven seconds to perform auto calibration and ranging after it is reconfigured. During this time span, the module cannot be addressed to perform any other actions.

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Synchronized Sampling (4011/4011D/4012/4013/4015/4016/4019)

Description of this command:

Orders all analog input modules to sample their input values and store them in special registers.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

40

Values that are sent:

Value in PointValue (0) = Not used

Read Synchronized Data (4011/4011D/4012/4013/4015/4016/4019)

Description of this command:

Returns the value that was stored in the specified module's register after the #** command.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1-2

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

3

Meaning of the DriverP3 parameter:

Indicates the data format to be used.

- 0 = Engineering Units
- 1 = % of FSR
- 2 = 2's complement
- 3 = Ohms.

Values that are returned:

Value in PointValue (0) = Read value stored in a special register.

Value in PointValue (1) = Status.

Important note:

If Status = 1, then the data has been sent for the first time since a Synchronized Sampling command was issued. If status = 0, then the data has been sent at least once before.

Read CJC Status (4011/4011D/4018/4018M/4019)

Description of this command:

Returns the value of the CJC (cold junction compensation) for a specified analog input module.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

2

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Values that are returned:

Value in PointValue (0) = Value of the CJC

CJC Offset Calibration (4011/4011D/4018/4018M/4019)**Description of this command:**

Calibrates to adjust for offset errors of its CJC sensors. The variable value indicates the "count" value. Each count equals approximately 0.009 C degrees.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

23

Read Digital I/O and Alarm Status (4011/4011D/4012/4014D/4016)**Description of this command:**

Returns the current state of digital I/O and alarm status.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1-4

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

4

Values that are returned:

Value in PointValue (0) = Digital input.

Value in PointValue (1) = Digital Output 0.

Value in PointValue (2) = Digital Output 1.

Value in PointValue (3) = Alarm state:

- 0 = Disabled.

- 1 = Momentary mode enabled.

- 2 = Latch mode enabled.

Set Digital Output Values (4011/4011D/4012/4014D/4016)**Description of this command:**

Sets the values of the module's digital outputs (ON or OFF).

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

2 (or 4 for 4016)

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

24

Values that are sent:

Value in PointValue (0) = New status of digital output 0 . .

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Value in PointValue (n-1) = New status of last digital output

Enable Alarm (4011/4011D/4012/4014D/4016)

Description of this command:

Enables the alarm in either latching or momentary mode.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

25

Meaning of the DriverP3 parameter:

Indicates the mode to enable.

- 0 = Momentary mode

- 1 = Latching mode

Values that are sent:

Value in PointValue (0) = Not used

Set High Alarm Value (4011/4011D/4012/4014D/4016)

Description of this command:

Sets the high alarm limit value.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

26

Values that are sent:

Value in PointValue (0) = New high alarm limit value

Set Low Alarm Value (4011/4011D/4012/4014D/4016)

Description of this command:

Sets the low alarm limit value.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

27

Values that are sent:

Value in PointValue (0) = New low alarm limit value

CPKSoft Engineering

Industrial communication
drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Disable Alarm (4011/4011D/4012/4014D/4016)

Description of this command:

Disables all alarm functions.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

28

Values that are sent:

Value in PointValue (0) = Not used

Clear Latched Alarm (4011/4011D/4012/4014D/4016)

Description of this command:

Resets the module's latch alarm to zero. Both alarm states are set to OFF, no alarm.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

29

Values that are sent:

Value in PointValue (0) = Not used

Read High Alarm Value (4011/4011D/4012/4014D/4016)

Description of this command:

Obtains the current high alarm limit value.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

5

Values that are returned:

Value in PointValue (0) = High alarm limit value.

Read Low Alarm Value (4011/4011D/4012/4014D/4016)

Description of this command:

Obtains the current low alarm limit value.

Methods used to run this command:

Analog Input / Digital Input

CPKSoft Engineering

Industrial communication
drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

6

Values that are returned:

Value in PointValue (0) = Low alarm limit value.

Read Event Counter (4011/4011D/4012/4014D)

Description of this command:

Obtains the current event counter value.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

7

Values that are returned:

Value in PointValue (0) = Event counter value.

Clear Event Counter (4011/4011D/4012/4014D)

Description of this command:

Resets the module's event counter to zero.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

30

Values that are sent:

Value in PointValue (0) = Not used

[Analog Output Modules Command Set]

Analog Output Modules Command Set

Set Configuration (4021)

Description of this command:

Sets address, output range, baud rate, data format, checksum status and slew rate.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

5

Meaning of the DriverP0 parameter:

Module Address (0-255).

CPKSoft Engineering

Industrial communication
drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

31

Values that are sent:

Value in PointValue (0) = Defines the baud rate to be used (0-4).

- 3 = 1200 Bauds
- 4 = 2400 Bauds
- 5 = 4800 Bauds
- 6 = 9600 Bauds
- 7 = 19200 Bauds
- 8 = 38400 Bauds

Value in PointValue (1) = Defines the new address (0-255).

Value in PointValue (2) = Defines the output range type, where:

- 0 = 0 .. 20 mA
- 1 = 4 .. 20 mA
- 2 = 0 .. 10 mV

Value in PointValue (3) = Defines if messages must include checksum

- 0 = No checksum in messages
- 1 = Use checksum in messages

Value in PointValue (4) = Defines the data format to be used.

- 0 = Engineering Units
- 1 = % of FSR
- 2 = 2's complement

Value in PointValue (5) = Defines the slew rate type.

- 0 = immediate change
- 1 = 0.0625 V/sec 0.125 mA/sec
- 2 = 0.125 V/sec 0.250 mA/sec
- 3 = 0.250 V/sec 0.500 mA/sec
- 4 = 0.500 V/sec 1 mA/sec
- 5 = 1 V/sec 2 mA/sec
- 6 = 2 V/sec 4 mA/sec
- 7 = 4 V/sec 8 mA/sec
- 8 = 8 V/sec 16 mA/sec
- 9 = 16 V/sec 32 mA/sec
- 10 = 32 V/sec 64 mA/sec
- 11 = 64 V/sec 128 mA/sec

Analog Data Out (4021)

Description of this command:

Sets the analog output value.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

32

Meaning of the DriverP3 parameter:

Indicates the data format to be used.

- 0 = Engineering Units
- 1 = % of FSR
- 2 = 2's complement

Values that are sent:

Value in PointValue (0) = New analog output value

CPKSoft Engineering

Industrial communication
drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Start-up Output Current/Voltage Configuration (4021)

Description of this command:

Stores the present value of an analog output in the module's non-volatile register. The output value will take effect upon start-up or after a brownout.

Methods used to run this command:

Analog Output / Digital Output/DO

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

36

Values that are sent:

Value in PointValue (0) = Not used

Trim Calibration (4021)

Description of this command:

Trims the analog output a specified number of units up or down. The variable value indicates the "count" value. Each count equals approximately 1.5 uA.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

35

Values that are sent:

Value in PointValue (0) = Number of units

4 mA Calibration (4021)

Description of this command:

Store the current output value as 4 mA reference.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

33

Values that are sent:

Value in PointValue (0) = Not used

20 mA Calibration (4021)

Description of this command:

Store the current output value as 20 mA reference.

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

34

Values that are sent:

Value in PointValue (0) = Not used

Configuration Status (4021)

Description of this command:

Reads the following parameters: address, output range, baud rate, data format, checksum status, and slew rate.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1-5

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

8

Values that are returned:

Value in PointValue (0) = Indicates the output range type, where:

- 0 = 0 .. 20 mA
- 1 = 4 .. 20 mA
- 2 = 0 .. 10 mV

Value in PointValue (1) = Indicates the baud rate code, where:

- 3 = 1200 Bauds
- 4 = 2400 Bauds
- 5 = 4800 Bauds
- 6 = 9600 Bauds
- 7 = 19200 Bauds
- 8 = 38400 Bauds

Value in PointValue (2) = Indicates the configured data format, where:

- 0 = Engineering Units.
- 1 = % of FSR.
- 2 = 2's complement.

Value in PointValue (3) = Indicates if the module Use checksum in messages

- 0 = No checksum in messages
- 1 = Use checksum in messages

Value in PointValue (4) = Indicates the slew rate type, where:

- 0 = immediate change
- 1 = 0.0625 V/sec 0.125 mA/sec
- 2 = 0.125 V/sec 0.250 mA/sec
- 3 = 0.250 V/sec 0.500 mA/sec
- 4 = 0.500 V/sec 1 mA/sec
- 5 = 1 V/sec 2 mA/sec
- 6 = 2 V/sec 4 mA/sec
- 7 = 4 V/sec 8 mA/sec
- 8 = 8 V/sec 16 mA/sec
- 9 = 16 V/sec 32 mA/sec -10 = 32 V/sec 64 mA/sec -11 = 64 V/sec 128 mA/sec

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/cpksoftengineering

[cpksoftengineering@](mailto:cpksoftengineering@hotmail.com)

[hotmail.com](mailto:cpksoftengineering@hotmail.com)

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Last Value Readback (4021)

Description of this command:

Return the latest output value it received from an analog data out command. If the module hasn't received an analog data out command since startup, it will return its startup output value.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

9

Meaning of the DriverP3 parameter:

Indicates the data format to be used.

- 0 = Engineering Units
- 1 = % of FSR
- 2 = 2's complement

Values that are returned:

Value in PointValue (0) = Latest output value

Current Readback (4021)

Description of this command:

Return the measured data in the module's configured data format. The value returned may be a rough estimate of the real value.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

10

Meaning of the DriverP3 parameter:

Indicates the data format to be used.

- 0 = Engineering Units
- 1 = % of FSR
- 2 = 2's complement

Values that are returned:

Value in PointValue (0) = Measured data

Read Reset Status (4021)

Description of this command:

Obtains the current reset status.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Meaning of the DriverP2 parameter:

11

Values that are returned:

Value in PointValue (0) = Reset status
[Digital I/O and Relay Output Modules Command Set]

Digital I/O and Relay Output Modules Command Set

Set Configuration (4050,4051,4052,4053,4055,4060,4068)

Description of this command:

Sets address, baud rate and checksum status.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

3

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

37

Values that are sent:

Value in PointValue (0) = Defines the baud rate to be used (0-4).

- 3 = 1200 Bauds
- 4 = 2400 Bauds
- 5 = 4800 Bauds
- 6 = 9600 Bauds
- 7 = 19200 Bauds
- 8 = 38400 Bauds

Value in PointValue (1) = Defines the new address (0-255).

Value in PointValue (2) = Defines if messages must include checksum

- 0 = No checksum in messages
- 1 = Use checksum in messages

Read Digital Data In as Bytes (4050,4051,4052,4053,4055,4060,4068)

Description of this command:

Returns the status of its digital input channels and a readback value of its digital output channels.

Methods used to run this command:

Analog Input

Number of points accepted by this command:

1-2

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

14

Values that are returned:

Value in PointValue (0) = Indicates the outputs value in byte mode.

Value in PointValue (1) = Indicates the inputs value in byte mode.

Read Digital Data In as Bits (4050,4051,4052,4053,4055,4060,4068)

Description of this command:

Returns the status of its digital input channels and a readback value of its digital output channels.

Methods used to run this command:

Digital Input

CPKSoft Engineering

Industrial communication
drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Number of points accepted by this command:

1-16

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

16

Meaning of the DriverP3 parameter:

Indicates the first group to be read.

- 0 = Outputs
- 1 = Inputs

Meaning of the DriverP4 parameter:

Indicates the first bit to be read (0-7).

Values that are returned:

Value in PointValue (0) = First bit read . .

Value in PointValue (n-1) = Last bit read

Digital Data Out (4050,4055,4060,4068)

Description of this command:

Sets a single digital output channel or all digital output channels simultaneously.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

38

Meaning of the DriverP3 parameter:

Indicates write type.

- 0 = Write all channels simultaneously.
- 1 = Write single channel.

Meaning of the DriverP4 parameter:

If HMITalk1.DriverP3 = 1, indicates the output number to be written (0-7).

Values that are sent:

Value in PointValue (0) = New digital output status

Synchronized Sampling (4050,4051,4052,4053,4055,4060,4068)

Description of this command:

Orders all analog input modules to sample their input values and store the values in special registers.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

40

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Values that are sent:

Value in PointValue (0) = Not used

Read Synchronized Data (4050,4051,4052,4053,4055,4060,4068)

Description of this command:

Obtains the value that was stored in its register by a synchronized sampling command.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1-3

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

13

Values that are returned:

Value in PointValue (0) = Indicates the outputs value in byte mode.

Value in PointValue (1) = Indicates the inputs value in byte mode.

Value in PointValue (2) = Indicates the status value.

Configuration Status (4050,4051,4052,4053,4055,4060,4068)

Description of this command:

Reads the following parameters: baud rate and checksum status.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1-2

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages

- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

12

Values that are returned:

Value in PointValue (0) = Indicates the baud rate code, where:

- 3 = 1200 Bauds

- 4 = 2400 Bauds

- 5 = 4800 Bauds

- 6 = 9600 Bauds

- 7 = 19200 Bauds

- 8 = 38400 Bauds

Value in PointValue (1) = Indicates the configured data format, where:

- 0 = ADAM 4050 module.

- 1 = ADAM 4060 module.

Value in PointValue (2) = Indicates if the module Use checksum in messages

- 0 = No checksum in messages

- 1 = Use checksum in messages

Read Reset Status

Description of this command:

Obtains the current reset status information.

Methods used to run this command:

Analog Input / Digital Input

Number of points accepted by this command:

1

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

15

Values that are returned:

Value in PointValue (0) = Reset status
[Counter/Frequency Modules Command Set]

Counter/Frequency Modules Command Set

Read Counter or Frequency Value (4080/4080D)

Description of this command:

Returns the value of counter 0 or counter 1 from a specified counter/frequency module.

Methods used to run this command:

Analog Input

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

19

Meaning of the DriverP3 parameter:

Counter to be read (0 or 1)

Values that are returned:

Value in PointValue (0) = Counter value

Set Maximum Counter Value (4080/4080D)

Description of this command:

Sets the maximum value of counter 0 or counter 1 from a specified counter/frequency module.

Methods used to run this command:

Analog Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

41

Meaning of the DriverP3 parameter:

Counter to be set (0 or 1)

Values that are sent:

Value in PointValue (0) = New maximum counter value

Read Maximum Counter Value (4080/4080D)

Description of this command:

Returns the maximum value of counter 0 or counter 1 from a specified counter/frequency module.

Methods used to run this command:

Analog Input

Number of points accepted by this command:

1

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

20

Meaning of the DriverP3 parameter:

Counter to be read (0 or 1)

Values that are returned:

Value in PointValue (0) = Maximum counter value

Start/Stop Counter (4080/4080D)

Description of this command:

Orders the specified counter counter/frequency module to start or stop counting.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

42

Meaning of the DriverP3 parameter:

Counter to be started/stopped (0 or 1)

Values that are sent:

Value in PointValue (0) = 0 to Stop, 1 to Start.

Clear Counter (4080/4080D)

Description of this command:

Clears counter 0 or counter 1 of the specified counter module.

Methods used to run this command:

Analog Output / Digital Output

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Module Address (0-255).

Meaning of the DriverP1 parameter:

Indicates if messages must include checksum

- 0 = Use checksum in messages
- 1 = No checksum in messages

Meaning of the DriverP2 parameter:

43

Meaning of the DriverP3 parameter:

Counter to be cleared (0 or 1)

Values that are sent:

Value in PointValue (0) = Not used.

Error messages

The following list shows the possible error messages that can be returned by the driver during a failed communication in the 'Status' property.

- [1005] DRIVER (Internal): Invalid driver stage
- [1300] PROTOCOL (Timeout): No answer
- [1410] PROTOCOL (Format): Invalid device id in response

CPKSoft Engineering

Industrial communication drivers.

www.cpksoft.com

www.facebook.com/

cpksoftengineering

cpksoftengineering@

hotmail.com

phone: 54-911-45788354

1990-2012

Industrial communication solutions for Windows

[1433] PROTOCOL (Format): Validation error in device response
[2106] CONFIG (NumValues): Invalid number of channels (max=4)
[2107] CONFIG (NumValues): Invalid number of channels (min=2)
[2109] CONFIG (NumValues): Invalid number of channels (must be 3)
[2111] CONFIG (NumValues): Invalid number of channels (must be 6)
[2112] CONFIG (NumValues): Invalid number of channels (must be 8)
[2147] CONFIG (NumValues): Only one value can be read or written
[2189] CONFIG (NumValues): Too many values (max=16)
[2194] CONFIG (NumValues): Too many values (max=2)
[2206] CONFIG (NumValues): Too many values (max=3)
[2216] CONFIG (NumValues): Too many values (max=4)
[2223] CONFIG (NumValues): Too many values (max=5)
[2235] CONFIG (NumValues): Too many values (max=8)
[3014] CONFIG (P0): Invalid device address (0-255)
[3023] CONFIG (P0): Invalid device address (-1-255)
[4030] CONFIG (P2): Invalid command
[4528] CONFIG (P3): Invalid counter number (0 or 1)
[4530] CONFIG (P3): Invalid data format
[4539] CONFIG (P3): Invalid first channel number (0-7)
[4540] CONFIG (P3): Invalid first group (0-1)
[4543] CONFIG (P3): Invalid mode
[4584] CONFIG (P3): Invalid write mode
[5004] CONFIG (P4): Invalid channel number (0-7)
[5011] CONFIG (P4): Invalid first channel (0-7)
[5012] CONFIG (P4): Invalid first output
[8060] CONFIG (Remote): Command is invalid or not supported
[8248] CONFIG (Remote): Operation is not supported

Supported devices

This driver can communicate with these devices, but is not necessarily limited to this list:

ADVANTECH ADAM 4011 Analog Input Module
ADVANTECH ADAM 4011D Analog Input Module
ADVANTECH ADAM 4012 Analog Input Module
ADVANTECH ADAM 4013 Analog Input Module
ADVANTECH ADAM 4014D Analog Input Module
ADVANTECH ADAM 4015 Analog Input Module
ADVANTECH ADAM 4016 Analog Input/Output Module
ADVANTECH ADAM 4017 8-Channel Analog Input Module
ADVANTECH ADAM 4017+ 8-Channel Analog Input Module
ADVANTECH ADAM 4018 8-Channel Analog Input Module
ADVANTECH ADAM 4018M 8-Channel Analog Input Module
ADVANTECH ADAM 4018+ 8-Channel Analog Input Module
ADVANTECH ADAM 4019 Universal Analog Input Module
ADVANTECH ADAM 4021 Analog Output Module
ADVANTECH ADAM 4050 Digital I/O Module
ADVANTECH ADAM 4051 Digital I/O Module
ADVANTECH ADAM 4052 Digital I/O Module
ADVANTECH ADAM 4053 Digital I/O Module
ADVANTECH ADAM 4055 Digital I/O Module
ADVANTECH ADAM 4060 Relay Output Module
ADVANTECH ADAM 4068 Relay Output Module
ADVANTECH ADAM 4080 Counter/Frequency Input Module
ADVANTECH ADAM 4080D Counter/Frequency Input Module

CPKSoft Engineering

Industrial communication
drivers.

www.cpksoft.com

[www.facebook.com/
cpksoftengineering](https://www.facebook.com/cpksoftengineering)

[cpksoftengineering@
hotmail.com](mailto:cpksoftengineering@hotmail.com)

phone: 54-911-45788354

1990-2012